

# Instructions for use of PegPerego vehicles

---

Instructions for operating vehicle models for children.

This text contains important information for owners and users of PegPerego products. Therefore, please read all instructions carefully before using your vehicle. This vehicle must not be operated on public roads and roads with traffic. Do not let your child ride on uneven terrain and near stairs. Make sure that the child does not bump into other vehicles or objects.

Always supervise your child!

Each model includes a special device that protects the motor against overload both during use and during charging. In case of overload, it switches off the engine for 20-30 seconds. Before using your vehicle for the first time, charge the battery for min. 14 hours. Only adults can charge the battery. Never let children play with batteries and charger. Only charge the battery if the vehicle loses speed. Protect the batteries from being completely discharged. Use only the original PEG PEREGO charger. Do not use a charger made for other purposes. Always charge the battery in the correct position. If the vehicle is not in use or is parked, charge the battery before storage and then at least once every 2 months. Before using your vehicle, check the operational condition of the vehicle. Check the battery, wires, charger, connectors, fuses, steering and brakes!

Do not leave the vehicle near a heat source (e.g. furnace, radiator, etc.). Protect the vehicle from water, rain and snow. Do not drive on sand or mud as this may cause engine or transmission failure.

We do not recommend using electric models for children under 24 months.

Battery replacement: Disconnect the connectors, flip the holder. Remove the battery, replace it with a new one, put it in place of the original battery, fix it with the holder, connect the connectors and close the cover.

Charging the batteries: Connect the charging device to the mains (230 V). If the indicator lights up, the charger is working. When charging the battery, disconnect the battery connector B from the cable connector A. Connect the battery connector B to the charger connector C.

Charge max. 14-18 hours continuously. If the battery is not yet fully charged, continue for about 2 hours until the indicator on the charger lights up at full intensity. (After connecting a discharged battery to the charger, the indicator light on the charger does not light up. It gradually lights up during charging, first dimly, then gradually the light gets stronger. If the indicator light shines at full intensity, the battery is charged. ) After charging, first disconnect the charging device from the socket (230 V) and then disconnect the battery connector from the charger connector. Connect the connector from the battery and the motor, close the cover and screw.

If you do not use the vehicle for a long time, charge the battery to the maximum once a month, but at least once every 2 months. Do not store the battery in excessively cold areas (below +5°C). Do not store the battery after use in a discharged state, there is a risk of damage to it - loss of capacity. The

loss of battery capacity occurs due to improper handling and does not fall under the grounds of complaint.

Cleaning: You can clean the vehicle with a damp cloth, and when necessary you can also use a non-aggressive detergent. Make sure that moisture and dirt do not get to the electrical and moving parts (motor, connectors, battery, wires, gearbox, bearings....)

Commercial use: In commercial use, Peg Perego vehicles are exposed to higher stresses for which they are not designed. This mainly concerns the faster wear of the wheels and drivetrain (engines/transmissions).

The warranty is valid for 2 years. The warranty becomes void if the failure was caused by mechanical or unprofessional use or intervention.

The warranty cannot be recognized if the consumer makes unauthorized interventions in the toy car, especially when adjusting the wheels, which prevents the wheels from slipping, i.e. install a rubber sleeve and the like.

The manufacturer is not liable for defects caused by improper handling, overloading or impacts and driving on an unsuitable surface, e.g. sharp stones or excessively large uneven terrain or driving on water.

The warranty also cannot be recognized if a battery with a higher voltage than recommended by the manufacturer is used.

If you detect any malfunction, do not use the vehicle. Do not repair more serious malfunctions yourself. Contact the supplier where you purchased the vehicle.

The vehicle must not be used in terrain with a large rise or fall, as it does not have mechanical brakes!!!

The vehicle warranty does not cover defects caused by operational wear and tear of mechanical parts such as wheels, gearboxes, electric motor, steering, switches and switches.

A deep discharge causes irreversible damage to the battery.

Manufacturing defects manifest themselves in the first days of operation, therefore most of the damage occurring after a few months of use is caused by operation.

The vehicle warranty applies to hidden manufacturing defects!!!

After the warranty expires, use original parts in case of malfunctions.

We wish your children a pleasant time spent with our small model vehicle.